

INSTALLATION INSTRUCTIONS



Boiling Billy JE, JR Series

**DO NOT PLUG IN OR TURN ON
POWER**



1. Fit tap and shank on the outlet connection provided.
2. Mount unit on the wall using fixing points on the back of the unit. It is advisable to position the tap outlet over a drain board so that in the event of a leaking tap the water can be disposed via the sink.
3. Connect cold water supply to the inlet (12mm) through a stop tap in the supply line. (stop tap to be provided by the installer)(. We recommend the fitting of a 350kpa PLV.
4. Connect overflow pipe to waste or any other area where water can be disposed in a safe manner.(Tundish should be fitted)
5. * Plug unit into 10 amp power outlet.
6. Turn 'on' water supply to the unit and 'open' the outlet tap.
7. Wait until the water flows out of the tap.
8. When the water flows out of the tap please switch on the power.

*3.0kw element requires a 15amp power outlet.

INSTALLATION INSTRUCTIONS **JE SERIES**

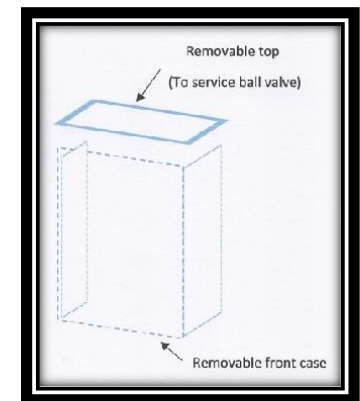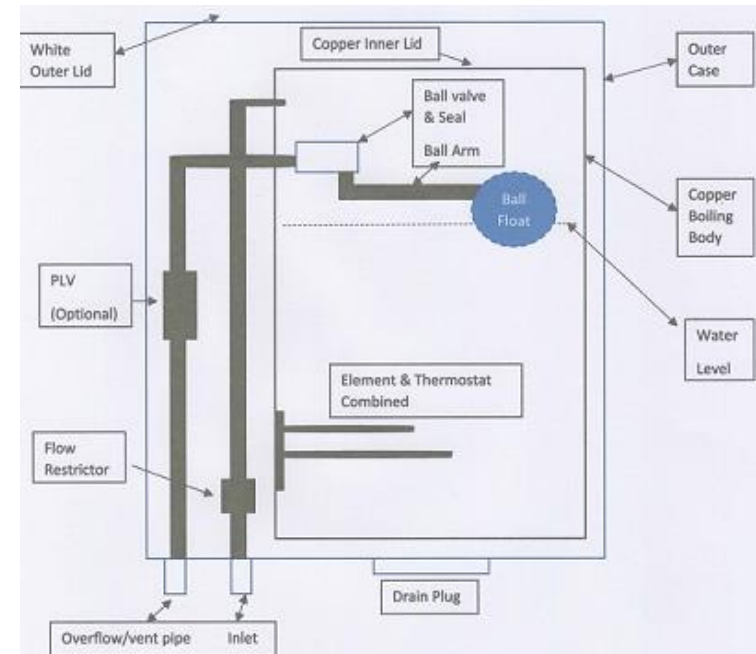

INSTALLATION INSTRUCTIONS **JR SERIES**

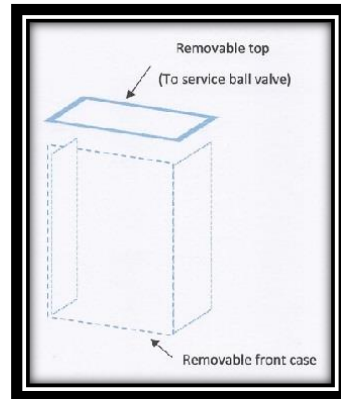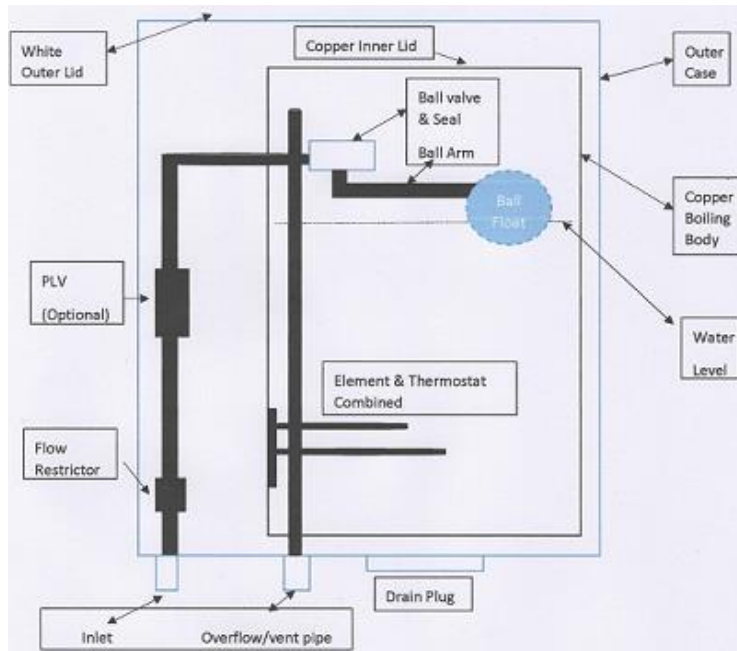

INSTALLATION INSTRUCTIONS

Boiling Billy JE, JR Series
DO NOT PLUG IN OR TURN ON
POWER

- **ALL UNITS MUST BE FITTED WITH A WATERMARKED WATER FILTER OR VOID WARRANTY .**
- **ONLY TEFLON TAPE TO BE USED WHERE NECESSARY.**
- **UNDER NO CIRCUMSTANCES IS PLUMBERS PASTE TO BE USED.**

To Plumber/User

DEPENDING ON WATER CONDITIONS, ADDITIONAL PRE-FILTERS SHOULD BE FITTED.
(CONTACT THE MANUFACTURER)

DO NOT connect to hot water line-to do so will **VOID** warranty.

AFTER POWER IS ON- allow 30 minutes before using.

Please leave these instructions with the owner.

DO NO MEGGER

Contact Us

1/33 Cedar Parade Moolap,
Victoria
Phone: (03) 52487072
Email: sales@boiling-billy.com
Web: www.boiling-billy.com

Web: www.boiling-billy.com



LIC WM- 0359



WIFFEN PRODUCTS PTY LTD

A.C.N 073 810 616 A.B.N 95 073 810 616
Issue April 2020



Above Sink Boiling Billy Instructions

IMPORTANT PLEASE READ

WIFFEN PRODUCTS PTY LTD

Boiling Billy



This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.

- Children being supervised not to play with the appliance
- This appliance is intended to be used in household and similar working environments e.g. staff kitchen areas in shops, offices, farmhouses, and other working environments.
- By clients in hotels, motels, bed, and breakfast type environments
- Ensure the power cable and power lead do not come into contact with liquids
- Misuse of this product may cause harm or serious injury

To Our Valued Customer

A special Thank you for choosing to purchase and install our

ABOVE SINK BOILING BILLY

INSTALLATION AND MAINTENANCE INSTRUCTION

For the above sink: Boiling Billy JE, JR series.

IMPORTANT PLEASE READ

“The Above sink Boiling Billy” dispenses boiling water

Please treat with care

If tundish is to be used, it must be placed above the sink in the open.

An authorised plumber must install units- unit must be connected in accordance with AS/NZS 3500.1 or AS/NZS 3500.4

POWER MUST BE OFF UNTIL INSTALLATION IS COMPLETED

*The unit is fitted with a computerized element and boil dry protection. The computer is set at 97degrees C, + -1 degree.

*Altitude will alter temperature (refer back to manufacturer)

- This unit **must be fitted** with a filter we recommend changing the cartridge every 6 months.
- The manufacturer recommends the cleaning and service of the unit every 12 months.

IF SUPPLIED CORD IS DAMAGED IT

MUST BE REPLACED BY AN AUTHORISED SERVICE AGENT

DO NOT SWITCH POWER ON UNTIL WATER RUNS OUT OF TAP.

Maximum inlet pressure 820kpa

JE & JR units must be fitted with an approved 350kpa pressure limiting valve.

Minimum inlet pressure 200kpa.

If a lower pressure is encountered refer to manufacturer.

TROUBLESHOOTING

Action only to be performed by a qualified person.

SYMPTON	CAUSES	ACTION
Water overflowing	Water level to high	Check and set water level to indicated level 20mm below overflow pipe. Remove ball valve insert. Clean and reinstall and adjust ball valve arm if necessary. Remove ball valve float and check to ensure that there is not water in it Replace if necessary.
Continuous boiling	Ball Valve defective Faulty element	Ensure ball valve closes off(does not leak) Replace if necessary Replace Element
Water not hot	Power not on Element faulty	Check if power is on Replace element
No water	Water has been turned off Blocked ball valve Blocked filter Units fitted with mini ball valve-located inside case at base inlet side	Turn on water Remove ball valve and clean out hole or replace ball valve Change filter cartridge Fully open mini ball valve and re adjust water flow as instructions on side of case.